



1* Fuel Injection Rail #2-Gasoline Engine; Engine Control Module-Diesel Engine.

2* Fuel Injection Rail #1-Gasoline Engine; Actuator-Diesel Engine.

3* Oxygen Sensors-Gasoline Engine; Fuel Heater-Diesel Engine.

4* Oxygen Sensors-Gasoline Engine; Engine Control Module 1-Diesel Engine.

5* Ignition 1-Gasoline Engine; Engine Control Module-Diesel Engine.

6* Powertrain Control Module B-Gasoline Engine; Engine Control Module B-Diesel Engine.

7* Supplemental Brake Assist - Gasoline Engine; Electronic Viscous Fan - Diesel Engine.

8* Rear Climate Control.

9* Sunroof.

Fuses	Usage
GLOW PLUG	Diesel Glow Plugs and Intake Air Heater
CUST FEED	Gasoline Accessory Power

Fuses	Usage
HYBRID	Hybrid
STUD #1	Auxiliary Power (Single Battery and Diesels Only)/ Dual Battery (TP2) Do not install fuse.
MBEC	Mid Bussed Electrical Center Power Feed, Front Seats, Right Doors
BLWR	Front Climate Control Fan
LBEC	Left Bussed Electrical Center, Door Modules, Door Locks, Auxiliary Power Outlet — Rear Cargo Area and Instrument Panel
STUD #2*	Accessory Power/Trailer Wiring Brake Feed
ABS	Anti-lock Brakes
VSES/ECAS	Vehicle Stability
IGN A	Ignition Power
IGN B	Ignition Power