
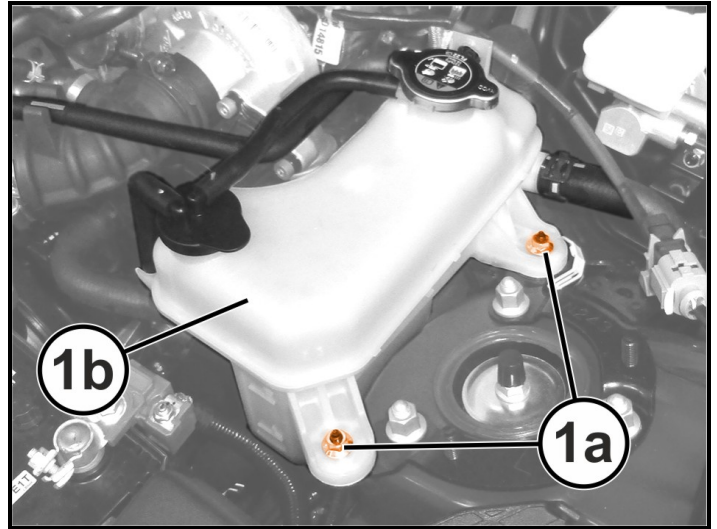


TURBOCHARGER OVERPRESSURE CONTROL SOLENOID VALVE


 **Labor Operations:** Click to display a list of Labor Operations associated with this procedure

REMOVAL

1. Disconnect and isolate the negative battery cable.
2. Remove the nuts (1a), raise the engine coolant reservoir (1b) and put it aside.




3. Disconnect the electrical connection (1).
4. Remove the bolts (2a) and remove the solenoid valve (2b).

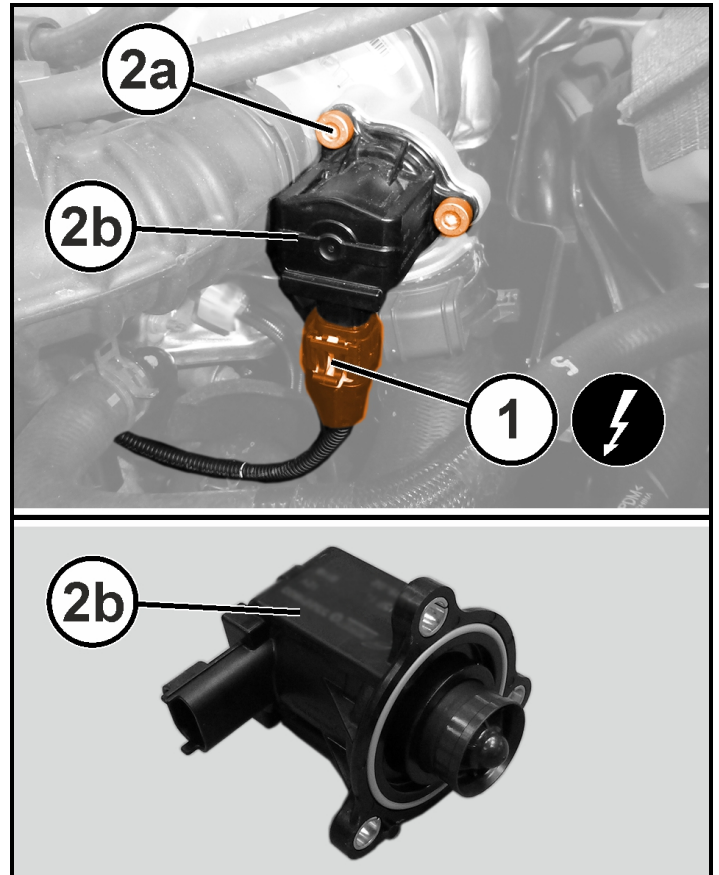

INSTALLATION

1. Replace the sealing ring (1).
2. Fit the solenoid valve (2a) in position, inserting the reference pin (2b) in its position (2c).

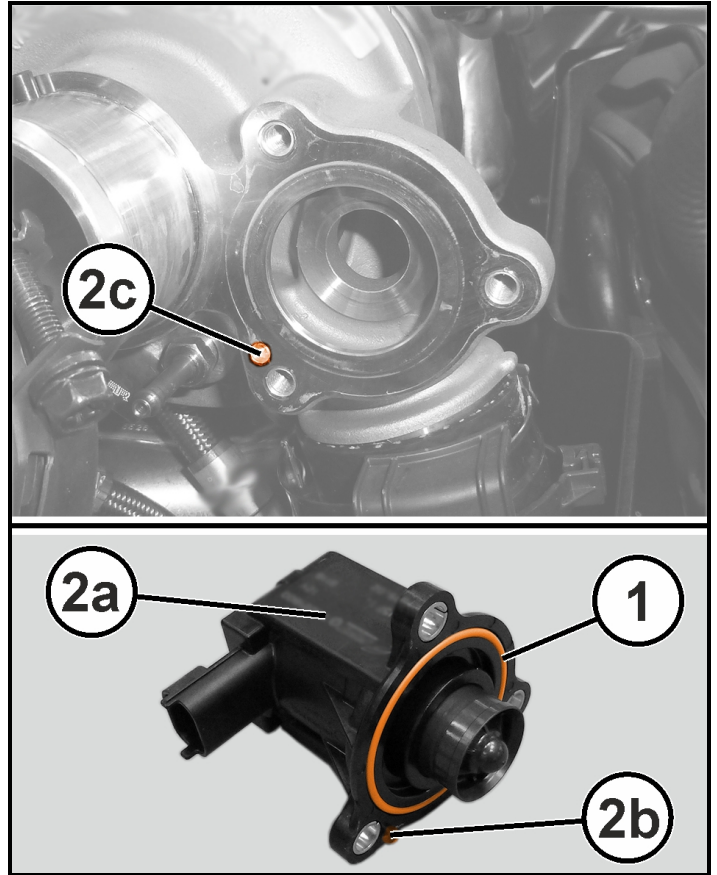

3. Tighten the solenoid valve nuts
4. Connect the electrical connection.
5. Install the engine coolant reservoir and tighten the nuts.
6. Connect the negative battery cable.